

# Shrimp Launch User Instructions

Everyone using this launch **MUST wear buoyancy aid or life jacket**. No smoking on board.

## Before starting check

- propeller blade is intact and not damaged
- engine is correctly in the water
- battery is switched on
- sufficient fuel on board.

## To Start

- insert kill cord and key
- check throttle is in neutral
- visible water jet
- kill cord cuts engine

For everyone's safety, **please attach the kill cord around your leg**, keep it attached at all times whilst the engine is running.

## To Stop

- switch off with key & remove kill cord
- switch battery off
- in bad weather or if it is forecast, moor bow to wind or at Lobster Quay

## Any Problems?

Please leave a note in the book and inform the Club Office *admin@warsashsc.org.uk* or voicemail on 01489583575